

Contains Glass – Please Handle With Care

Please visit our YouTube video below for an easy to follow method of inserting coins into this frame.

YouTube Channel “Frame And Display”

Video title “Framing Coins - Displaying United Kingdom Ten Pence 10p Pieces”

https://youtu.be/-HMvJs_ddrk



Instructions.

Find a large clean area to work on and remove the outer back by bending the black tabs.

Carefully remove the white plastic spacers by teasing the two short ones away from the frame. The two longer ones will now fall out

Remove the Mount and Glass. Put the glass carefully to one side.

Insert the coins into the mount taking care to get them correctly orientated.

Place the glass on top of the coins.

Replace the Glass Coin Mount sandwich back into the frame by placing the frame over the sandwich. Once the sandwich is back in the frame hold it firmly against the frame rebate whilst turning the frame over on to its back.

Replace the white spacers, two longest ones first, top and bottom. Replace the two shorter spacers. Replace back noting the correct place for the wall hanger and bend black tabs back into place.

It is suggested the back of the frame is sealed with adhesive tape to prevent ingress of bugs. Overuse of the bendy tabs can cause them to fail, these can be easily replaced by a Picture Framer.